

DRYER INSTALLATION - OD 100, B 250-1 built-in

R10





What items will you need?




- Key wrench size M10
- 8 x stainless steel bolts M6x40 (with standard back plate thickness 36 mm), flat and spring washers
- Sanitary sealant clear
- Spirit level

Installation process




1. Install the wall bracket by inserting 6 bolts and screwing them in the M6 hammer nuts in the back side of the back plate. Make sure that the wall bracket is level.

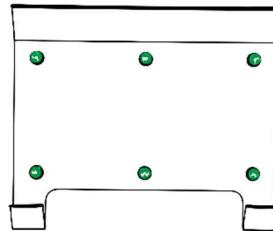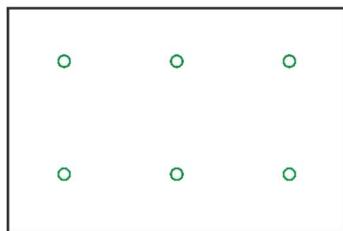


2. Make sure that you removed the transit bar from underneath the product! Without its removal, the dryer will not work correctly!

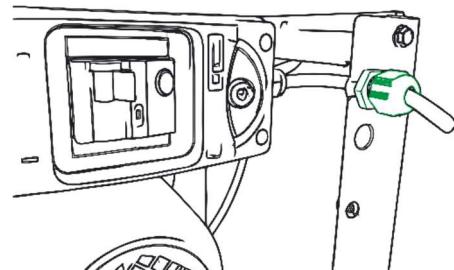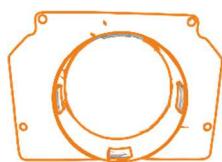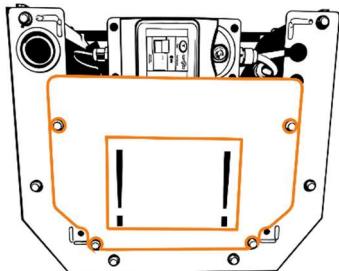


3. Pull out the waste hose entirely by pulling downwards until you see the white mark. If you do not see the white mark, the waste hose is not pulled out enough! Operating product without properly pulled out waste hose can lead to a damage to the product! Shorten the drain hose as needed.

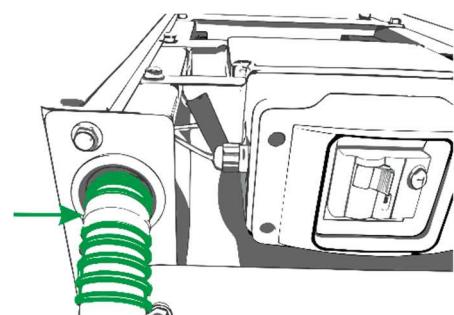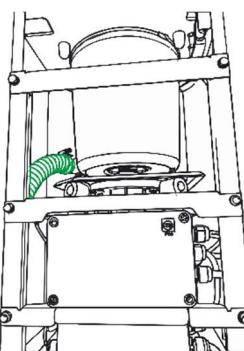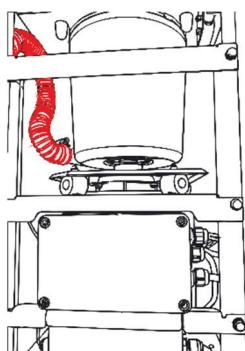

4. Install a PROTECTIVE PLATE underneath the dryer using the same bolts from removed transit bar. The protective plate must be always installed when the dryer is in operation.

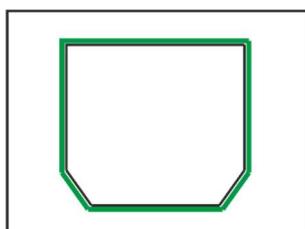

5. Apply clear sanitary sealant around the hole for inserting the swimwear spin dryer (green line).

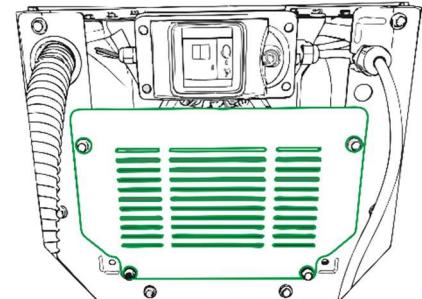


DRYER INSTALLATION - OD 100, B 250-1 built-in




R10


6. Insert the swimwear spin dryer into the cabinet through the inserting hole in the top side. When inserting the dryer, make sure that the front side of the dryer is as close as possible to the front side of the cabinet. Once the dryer is almost down (10 cm remaining), push the dryer all the way to the back side of the cabinet so that it locks on the wall bracket. When the dryer is inserted correctly, the stainless steel frame sits tightly on the cabinet with no gap at the back. Should there be a gap at the back side of the cabinet, the dryer is not locked in the wall bracket, please repeat the process.

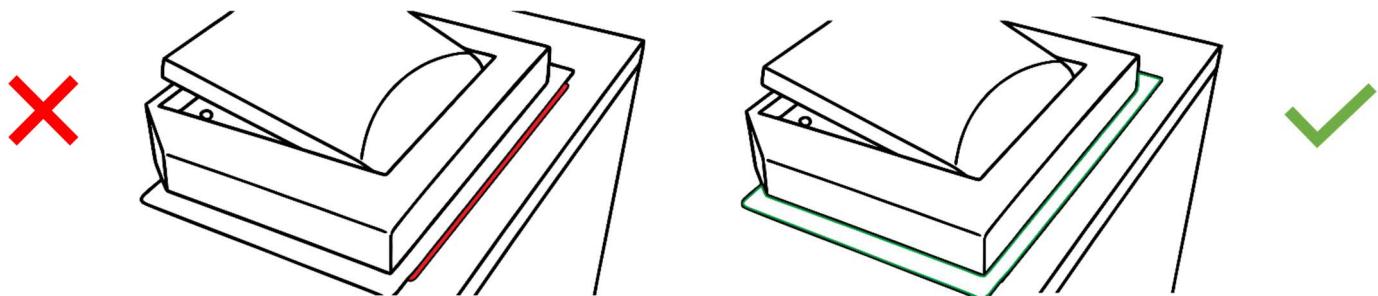

7. Unscrew 2 screw at the bottom side of the dryer and using the same nuts screw them back in with the securing bracket. You will lock the dryer in place by screwing two M6 bolts into the hammer nuts.

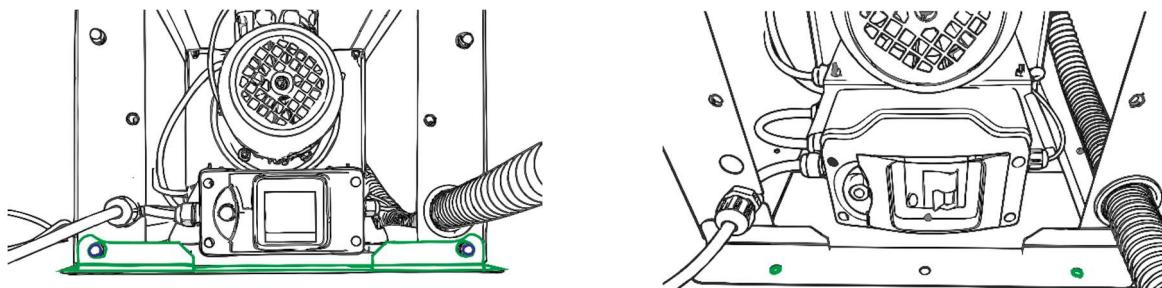

8. The RCCB is in the TRANSPORT MODE, turn it ON by flipping the switch.

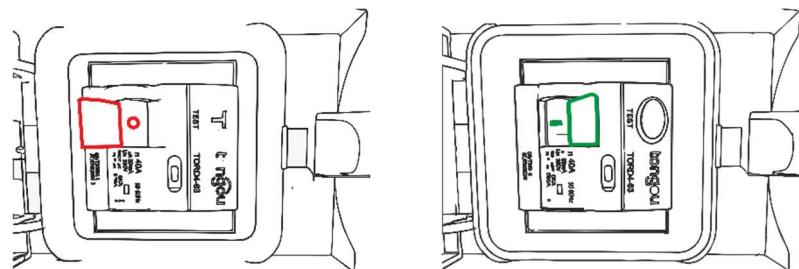

9. Install the operating manual on the wall above the dryer so that the top edge was 165 cm from the floor.

Electrical connection

⚠️ WARNING All electronic connections must be done by a qualified electrician and in accordance with all applicable local electric codes and regulations.

After installation of the product to the wall, connect the dryer to the power socket or directly to the power (L – live wire – brown, N – neutral wire – blue, PE – ground wire – green/yellow).

First use of the product

Before first use of the product, make sure that the inner drum is intact, and that the product was not damaged during installation.

Operate the swimwear dryer according to the operation instructions on the lid and on the wall (see the annex).