

MONTHLY CLEANING - OD 100, B 250-1

R10

BAMIKO


We recommend daily, weekly and monthly cleaning in places with chlorinated water with less than 200 customers per product per day. In case that the water is more aggressive (iron, sulfur, salt) or with more customers per day, we recommend shortening the cleaning period in order to prevent malfunctioning of the product.

⚠WARNING During cleaning and maintenance, the Swimwear spin dryer must be unplugged.


⚠WARNING Never pour water inside the dryer, it could lead to water damage.

Monthly cleaning

0. Clean the outside cover according to the weekly cleaning instructions.
1. Unscrew 4 screws using the supplied screwdriver, keep the screws. Remove the white plastic part, check that the springs are attached to the black plastic tube and that they are intact. Clean the white plastic part using a disinfectant and a soft cloth.
2. Remove the stainless-steel band and clean it using disinfectant and a soft cloth.

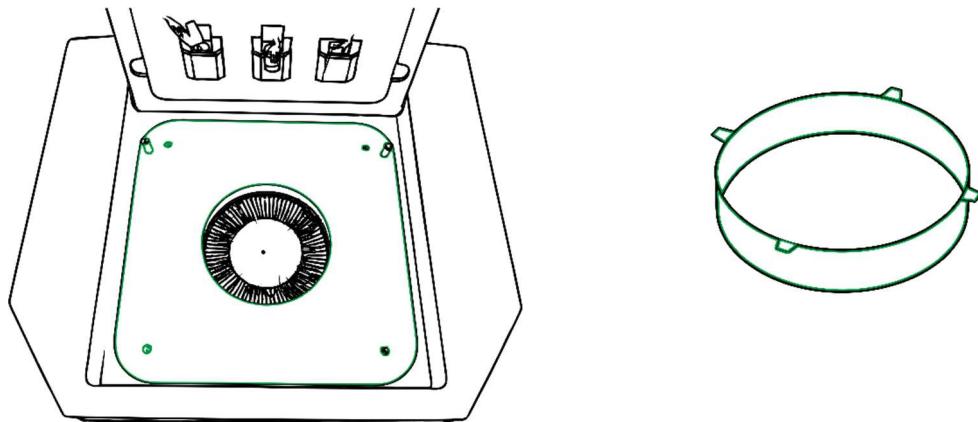

3. Check the space between the inner and outer drum and make sure that there is no foreign object. In the case there is one, remove it. Make sure that the hose connection outlet at the bottom of the outer drum is not clogged. In case of blockage, clean it thoroughly. Spray the space between the drums using disinfectant and let it work. Then clean the space thoroughly using the supplied bottle brush.
4. Make sure that there is no foreign object inside the inner drum, in case there is one, remove it. Spray the inner drum using disinfectant and let it work. Then clean the drum thoroughly using a soft cloth. Make sure that the bristle ring is properly fixed on the top of the inner drum and intact. In case of damage, contact your supplier and order a spare part.

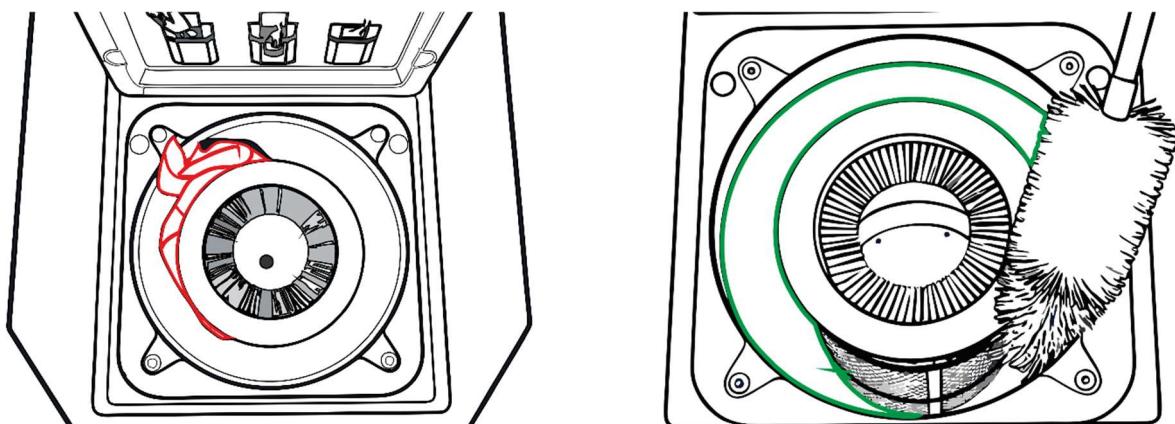


MONTHLY CLEANING - OD 100, B 250-1

R10




- Put the stainless-steel band back inside the outer drum and make sure that the 4 bent parts are facing the brass nuts (as seen in the picture).
- Install back the white plastic part by screwing in the 4 previously removed screws, make sure that the springs fit inside the 2 holes. Test that the springs are strong enough to open and hold the lid.

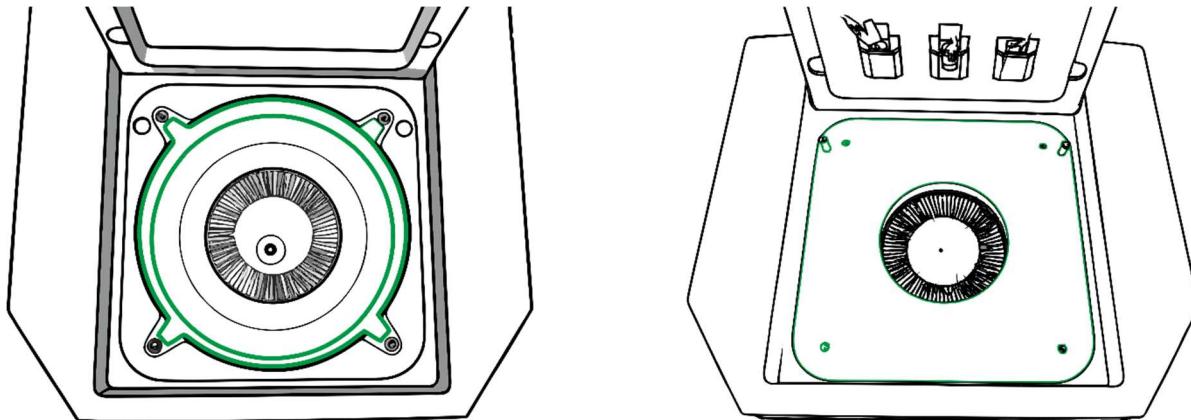

After cleaning, plug the dryer back in.

- At the bottom side of the dryer locate the junction box with RCD. Open the plastic door and press the „TEST” button.
- The RCD’s switch must move to the „OFF” position. Move the switch back to the „ON” position to resume normal function. If the switch does not move to the „OFF” position during testing or is unable to be moved back to the „ON” position, the RCD may be faulty. Please contact your swimwear dryer’s supplier!

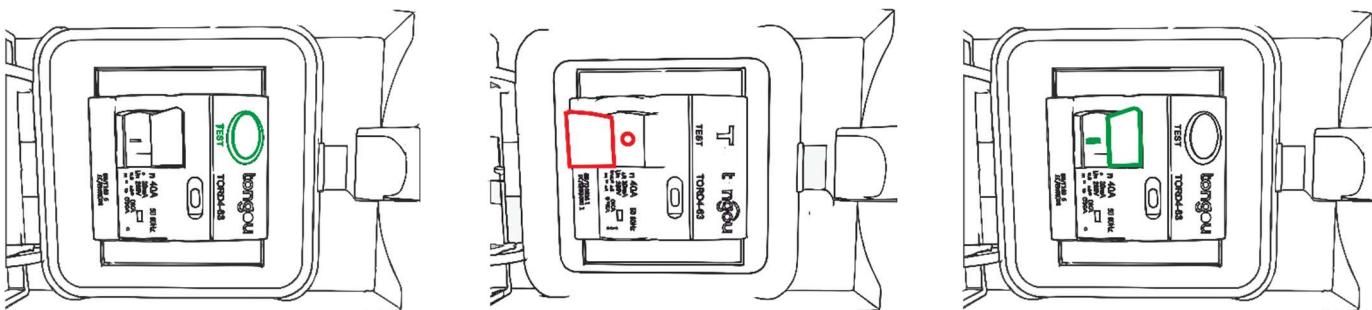

- Insert a wet swimsuit/cloth inside the drum and let the cycle run. This will remove the remaining of the disinfectant. At the same time check that the extracted water exits freely through the waste hose and that it is clear. If not, the waste hose must be cleaned or replaced with a new one.
- Make sure that the engine starts immediately after closing the lid, the cycle time is 10 seconds, and the engine stops instantly (in less than 1 second). In case the engine takes longer to stop, please contact your supplier, the brake pads might be worn out.